


Solace


by LOVENSE

Charging

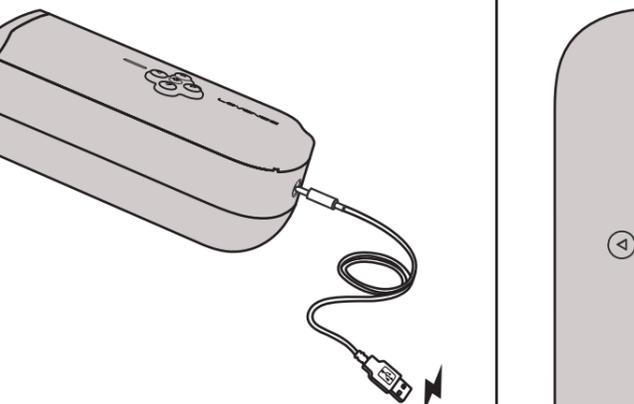

Once it is fully charged, the solid red light will turn off.

Turn On/Off & Start/Stop thrusting

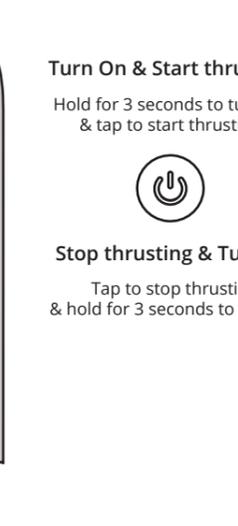


Turn On & Start thrusting
Hold for 3 seconds to turn on & tap to start thrusting.




Stop thrusting & Turn Off
Tap to stop thrusting & hold for 3 seconds to turn off.



One tap to change thrusting pattern

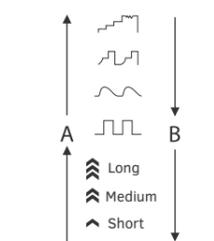

One tap to change stroke speed

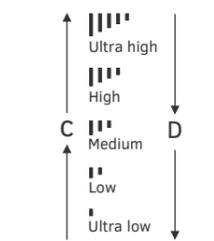


Changing setting

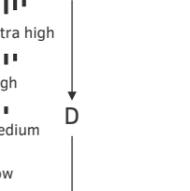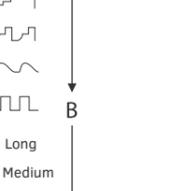


Cleaning




a) After Solace has stopped, press button B for 3 seconds to let the head of the inner holder come out.

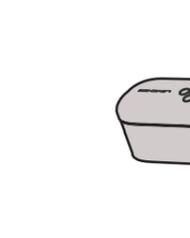

b) Gently press both sides to pull out the inner sleeve and inner holder completely.

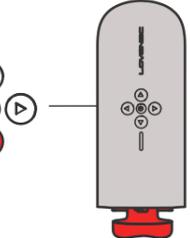

c) Only the inner sleeve and the sleeve holder can be washed with water. After, dry them thoroughly.

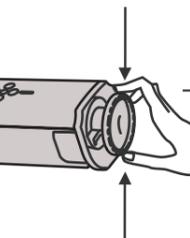


d) Put the inner sleeve back into the sleeve holder and make sure the plastic ring sits in the groove.




e) Insert the inner holder back into the main body. You will hear a click when it is stored correctly.


Desk mount

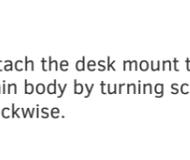


a) Attach the desk mount to the main body by turning screws (X) clockwise.

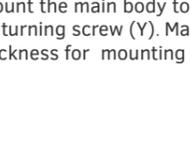


b) Mount the main body to the desk by turning screw (Y). Maximum table thickness for mounting - 5.5 cm.

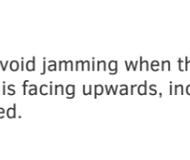


c) Adjust the angle* by loosening or tightening screw (Z).
*To avoid jamming when the thrusting cup is facing upwards, increase stroke speed.

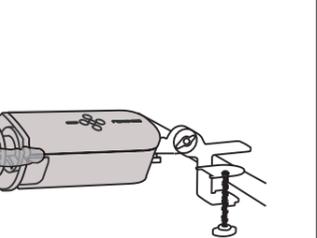

c) Only the inner sleeve and the sleeve holder can be washed with water. After, dry them thoroughly.


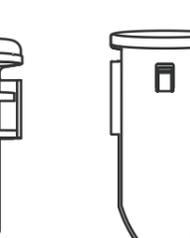


d) Put the inner sleeve back into the sleeve holder and make sure the plastic ring sits in the groove.


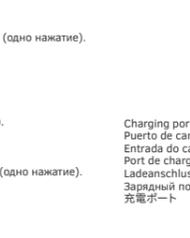


e) Insert the inner holder back into the main body. You will hear a click when it is stored correctly.



Cap

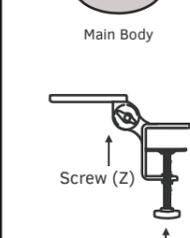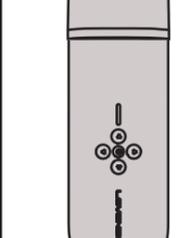


Main Body

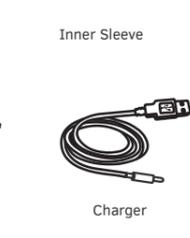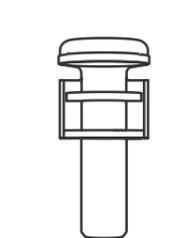



Inner Sleeve

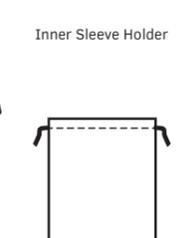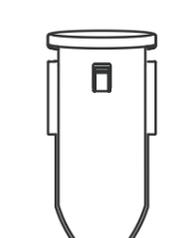



Inner Sleeve Holder

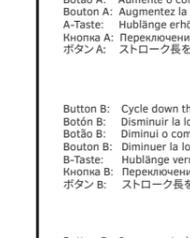

Charger

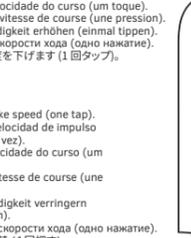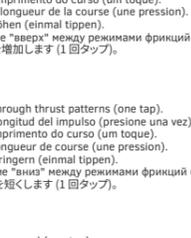




Desk Mount

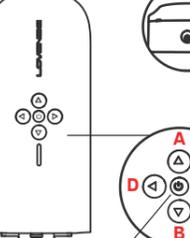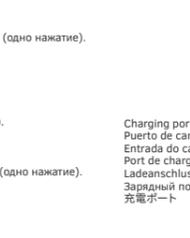



Bag



 
Cap

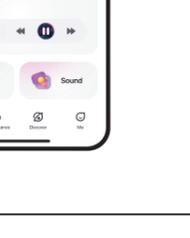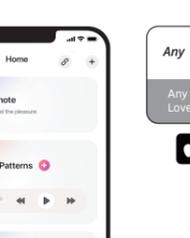




Charger

 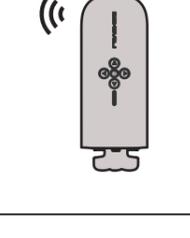




Desk Mount

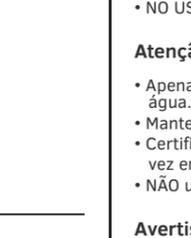




Bag

 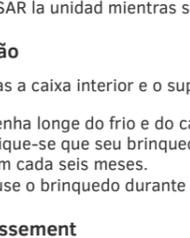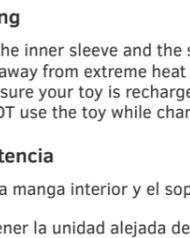



Cap

 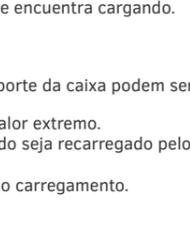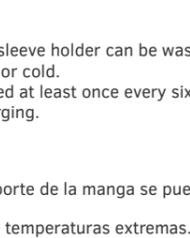



Charger

 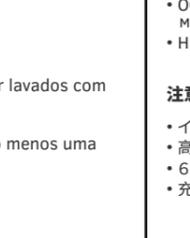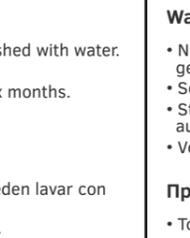



Desk Mount

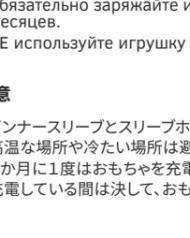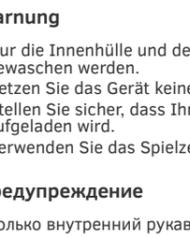

Bag

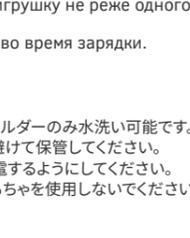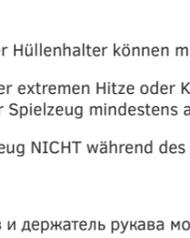

Cap

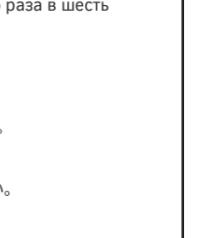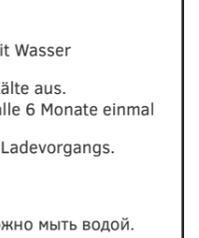

Button A

Cycle up through thrust patterns (one tap).
Botón A: Aumente la longitud del impulso (presione una vez).
Botão A: Aumente o comprimento do curso (um toque).
Bouton A: Augmentez la longueur de la course (une pression).
A-Taste: Hublänge erhöhen (einmal tippen).
Кнопка A: Переключение "вверх" между режимами фрикции (одно нажатие).
ボタンA: ストローク長を増加します (1回タップ)。

Button B

Cycle down through thrust patterns (one tap).
Botón B: Disminuir la longitud del impulso (presione una vez).
Botão B: Diminui o comprimento do curso (um toque).
Bouton B: Diminuer la longueur de course (une pression).
B-Taste: Hublänge verringern (einmal tippen).
Кнопка B: Переключение "вниз" между режимами фрикции (одно нажатие).
ボタンB: ストローク長を短くします (1回タップ)。

Button C

Increase stroke speed (one tap).
Botón C: Aumentar la velocidad de impulso (presione una vez).
Botão C: Aumente a velocidade do curso (um toque).
Bouton C: Augmenter la vitesse de course (une pression).
C-Taste: Hubgeschwindigkeit erhöhen (einmal tippen).
Кнопка C: Увеличение скорости хода (одно нажатие).
ボタンC: ストローク速度を上げます (1回タップ)。

Button D

Decrease stroke speed (one tap).
Botón D: Disminuir la velocidad de impulso (presione una vez).
Botão D: Diminui a velocidade do curso (um toque).
Bouton D: Diminuer la vitesse de course (une pression).
D-Taste: Hubgeschwindigkeit verringern (einmal tippen).
Кнопка D: Уменьшение скорости хода (одно нажатие).
ボタンD: ストローク速度を下げます (1回タップ)。

On/Off (hold for 3 seconds) & start/stop thrusting (one tap).

 

Encendido/apagado (mantener presionado durante 3 segundos) y iniciar/detener el impulso (presione una vez).
Ligar/desligar (mantenha pressionado por 3 segundos) e iniciar/parar o impulso (um toque).
Marche/Arrêt (maintenir pendant 3 secondes) et démarrer/arrêter les poussées (une pression).
Schnellen Sie den QR-Code, um sich die Produktanweisungen anzusehen.
Ein/Aus (3 Sekunden lang halten) und Schub starten/stoppen (einmal tippen).
Вкл./Выкл. (удерживайте в течение 3 секунд) и нажать/остановить фрикции (одно нажатие).
オン/オフ (3秒長押し) & 突き出し開始/停止 (ワンタップ)。

Charging port

Puerto de carga
Entrada do carregador
Port de chargement
Ladeanschluss
Зарядный порт
充電ポート

Visit lovensse.com for a complete user manual.

Loveense Remote

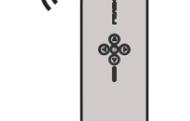

Scan the QR code to watch the product instructions.
Escanea el código QR para ver las instrucciones del producto.
Escaneie o código QR para assistir às instruções do produto.
Scannez le code QR pour regarder les instructions d'utilisations du produit.
Scannen Sie den QR-Code, um sich die Produktanweisungen anzusehen.
Отсканируйте QR-код, чтобы посмотреть инструкции по продукту.
QRコードをスキャンしてプロダクト説明動画を視聴しよう!

Warning

- Only the inner sleeve and the sleeve holder can be washed with water.
- Keep away from extreme heat or cold.
- Make sure your toy is recharged at least once every six months.
- DO NOT use the toy while charging.

Advertencia

- Solo la manga interior y el soporte de la manga se pueden lavar con agua.
- Mantener la unidad alejada de temperaturas extremas.
- Cargar el juguete por lo menos una vez cada seis meses.
- NO USAR la unidad mientras se encuentra cargando.

Atenção

- Apenas a caixa interior e o suporte da caixa podem ser lavados com água.
- Mantenha longe do frio e do calor extremo.
- Certifique-se que seu brinquedo seja recarregado pelo menos uma vez em cada seis meses.
- NÃO use o brinquedo durante o carregamento.

Avertissement

- Seuls le boîtier intérieur et le support du boîtier peuvent être lavés à l'eau.
- Ne pas exposer à une chaleur ou un froid extrême.
- Assurez-vous que votre jouet soit rechargé au moins une fois tous les six mois.
- NE PAS utiliser le jouet pendant le chargement.

Warnung

- Nur die Innenhülle und der Hüllenhalter können mit Wasser gewaschen werden.
- Setzen Sie das Gerät keiner extremen Hitze oder Kälte aus.
- Stellen Sie sicher, dass Ihr Spielzeug mindestens alle 6 Monate einmal aufgeladen wird.
- Verwenden Sie das Spielzeug NICHT während des Ladevorgangs.

Предупреждение

- Только внутренний рукав и держатель рукава можно мыть водой.
- Не подвергайте воздействию сильной жары или холода.
- Обязательно заряжайте игрушку не реже одного раза в шесть месяцев.
- НЕ используйте игрушку во время зарядки.

注意

- インナースリーブとスリーブホルダーのみ水洗い可能です。
- 高温な場所や冷たい場所は避けて保管してください。
- 6か月に1度はおもちゃを充電するようにしてください。
- 充電している間は決して、おもちゃを使用しないでください。